

Street Fire HEI Vacuum Advance Canister PN 5597

Important: Read these instructions before attempting the installation.

Parts Included:

1 - Vacuum Advance Canister

WARNING: Before installing the Canister, disconnect the battery cables. When disconnecting the battery cables, always remove the Negative (-) cable first and install it last.

1. Disconnect the wiring from the distributor cap and remove the vacuum line from the canister
2. Remove the distributor cap without disconnecting the spark plug wires.
3. Remove the three screws that hold the vacuum canister in place.
4. Lift the canister out while pushing the advance rod down to remove the canister.
5. Install the new advance canister. Make sure the advance rod seats in the groove.
6. Install the three retaining screws and connect the vacuum advance line.
7. Install the distributor cap and connect the wiring.

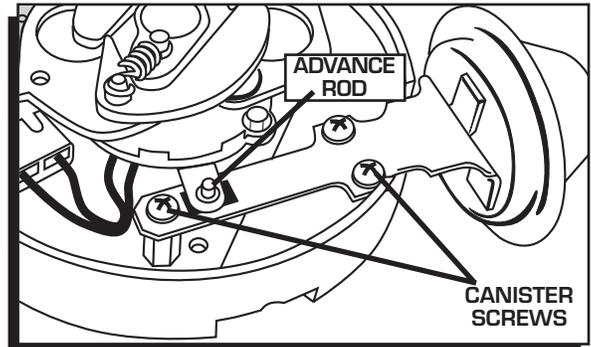


Figure 1 Replacing the Vacuum Canister.